



Unit: mm(approx. inch)

● EJX310A [Style: S2] and EJX430A [Style: S2] (Wetted Parts Material Code: S)

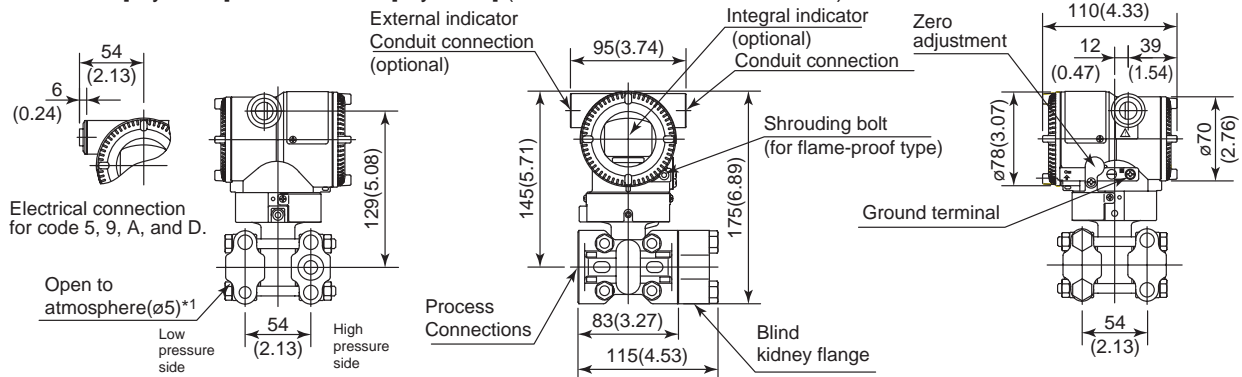


\*1: Applicable for EJX430A.


● EJX430A [Style: S2] (Wetted Parts Material Code: H, M, T)

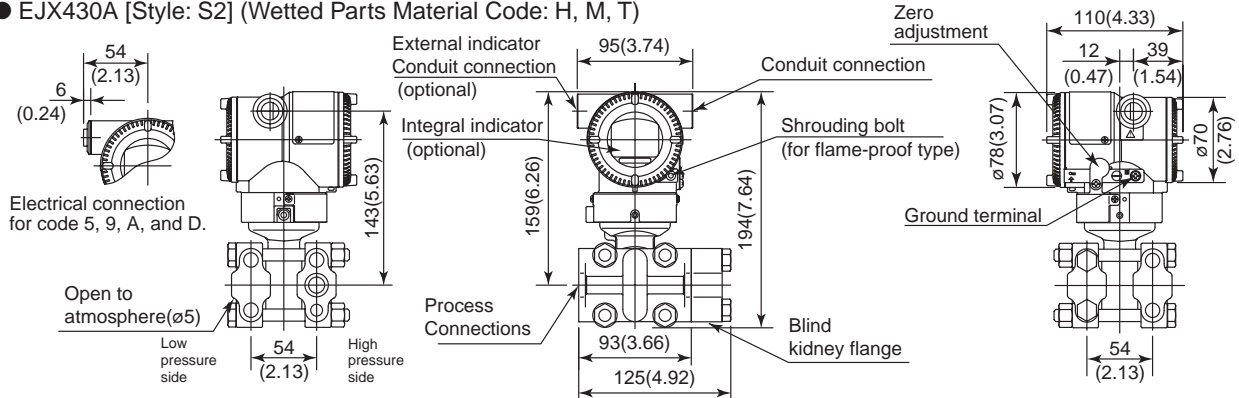

● EJX440A [Style: S2]

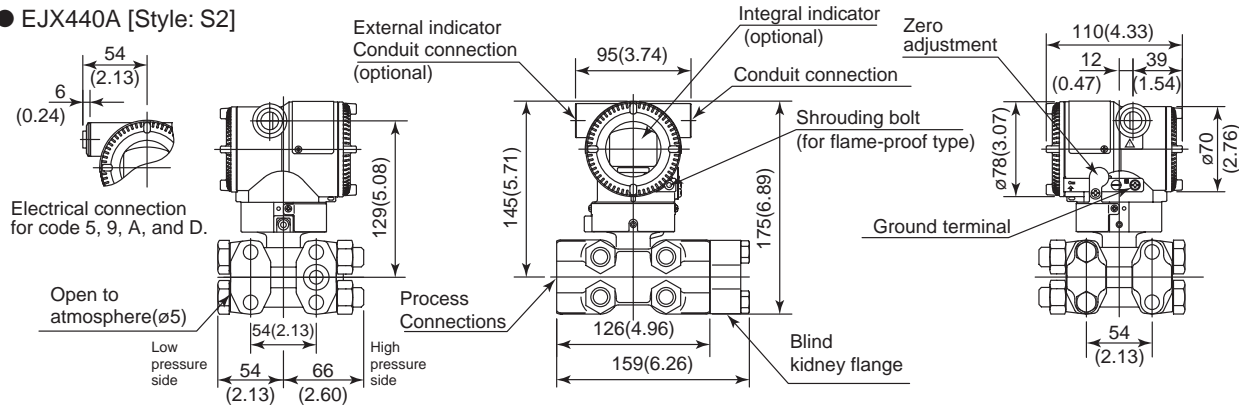

● Terminal Configuration

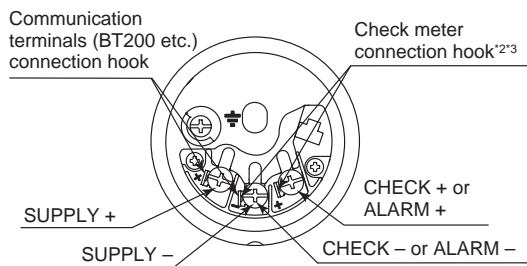

● Terminal Wiring

SUPPLY	+ -	Power supply and output terminal
CHECK or ALARM	+ -	External indicator (ammeter) terminal <sup>2,3</sup> or Status contact output terminal <sup>3</sup> (when /AL is specified)
	⏏	Ground terminal

\*2: When using an external indicator or check meter, the internal resistance must be 10 Ω or less. A check meter or indicator cannot be connected when /AL option is specified.

\*3: Not available for fieldbus communication type.