


Drawings

EJX118A Diaphragm Sealed Differential Pressure Transmitter (Transmitter body section)


DP **harp** EJX™

[Style: S2]

Unit: mm(approx. inch)

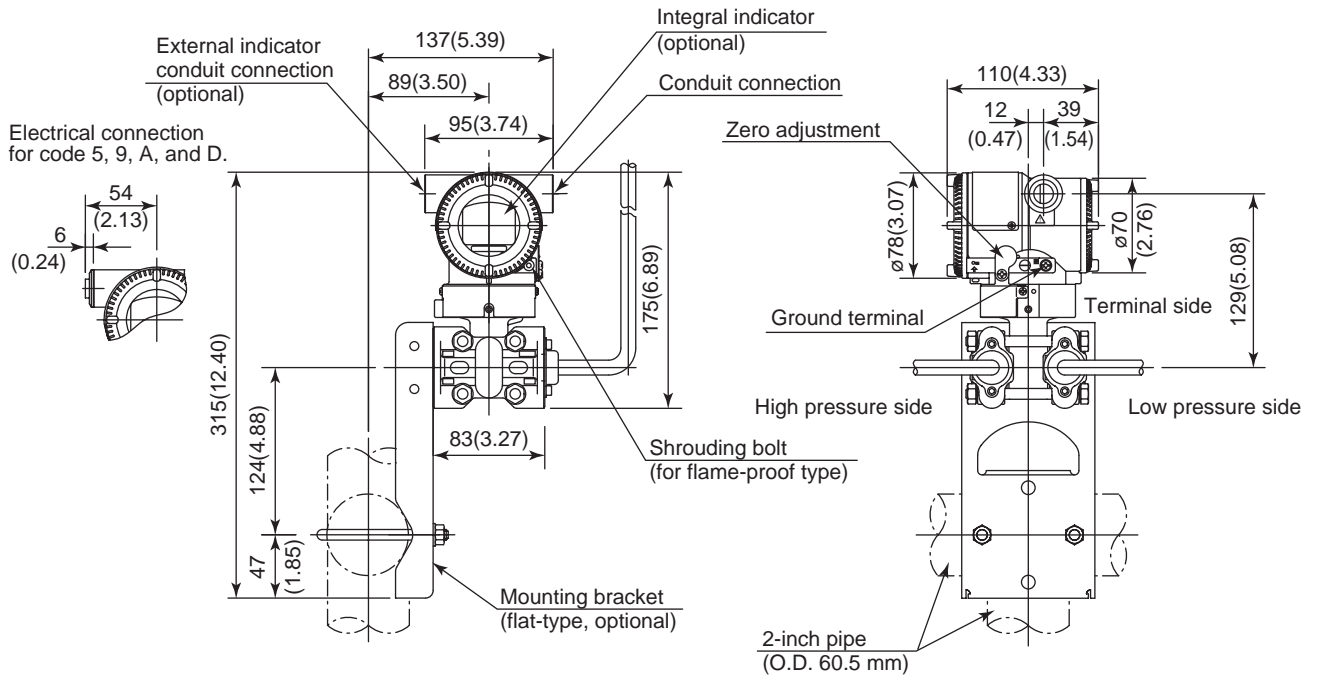

● Terminal Configuration

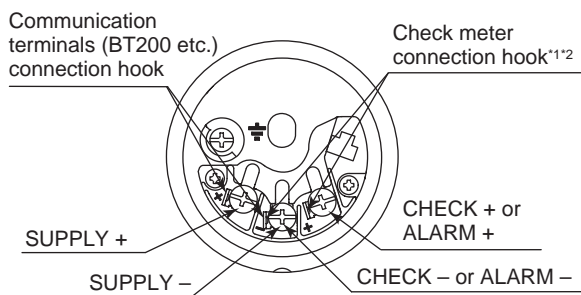

● Terminal Wiring

SUPPLY +	Power supply and output terminal
CHECK +	External indicator (ammeter) terminal ^{1,2} or Status contact output terminal ² (when /AL is specified)
ALARM +	
—	Ground terminal

*1: When using an external indicator or check meter, the internal resistance must be 10 Ω or less. A check meter or indicator cannot be connected when /AL option is specified.

*2: Not available for fieldbus communication type.