



Unit: mm(approx. inch)

● EJX910A

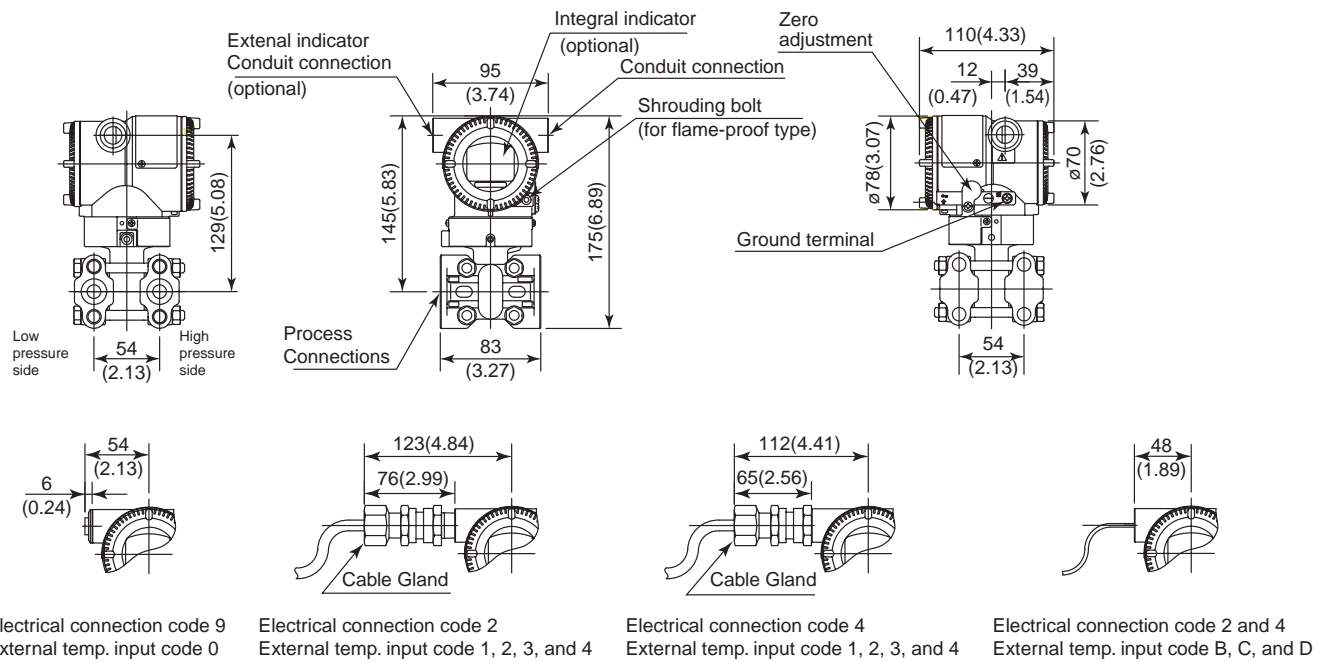

● Terminal Configuration

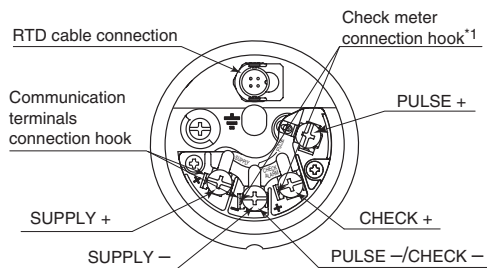

● Terminal Wiring

SUPPLY + -	Power supply and output terminal
CHECK + -	External indicator(ammeter) terminal*1
PULSE + -	Pulse or status contact output terminal
	Ground terminal

*1: When using an external indicator or check meter, the internal resistance must be 10 Ω or less.