

General Specifications

GS 11Y01B01-01E-A

Model TDLS200
Tunable Diode Laser
Spectroscopy (TDLS) Analyzer

TDLS200
TruePeak

The TruePeak Tunable Diode Laser Spectroscopy (TDLS) Analyzer is capable of measuring a number of near-infrared absorbing gases in difficult process applications. With the capability of measuring at very high temperature, high pressures and under difficult conditions (corrosive, aggressive, high particulate service), the TruePeak analyzer is one of the most robust process analyzers available. Most applications are measured in-situ, reducing installation and maintenance costs. In addition, most measurements are rapid (5 seconds) and interference free, offering improved accuracy when compared to other process analyzers.

Typical gases measured include:

- Oxygen in process applications and combustion applications. Process temperatures can be as high as 1500°C, pressures can be as high as 10 bar. Measurement span is typically between 1% and 100% oxygen.
- Carbon Monoxide in process and combustion applications. Process temperatures can be as high as 1500°C. Two versions are available, high sensitivity with ppm detection limits possible and standard sensitivity for high ppm and percent level CO measurements
- Part per million Moisture in aggressive process streams. Sub-ppm detection limits are possible with measurement in corrosive and aggressive process streams

Other applications and gases are possible with the TruePeak TDLS. Please fill out the Application Data Sheet at the end of this document and send to Yokogawa.




Features

- In Situ Analysis
- Fast Response (5-20 seconds)
- Interference Free for most applications
- TruePeak Measurement Capable of measuring under changing pressure, temperature and background
- Process Pressures up to 20 Bar
- Process Temperature up to 1500°C
- Optical Measurement, no sensor contact with process
- Low LTCO¹ (no moving parts, high MTTF² for components)
- Flexible Installation Options
- On Board Diagnostics
- ATEX Group II for zone 1 (Cat 2G) or 2 (Cat 3G) with purge systems

¹ Long term cost of ownership

² Mean time to failure

System configuration

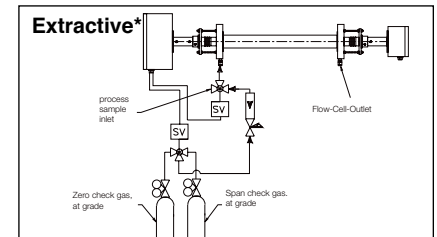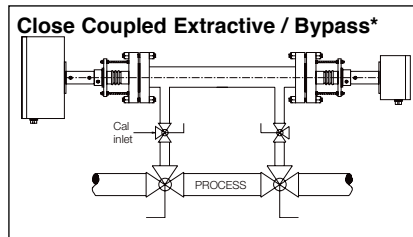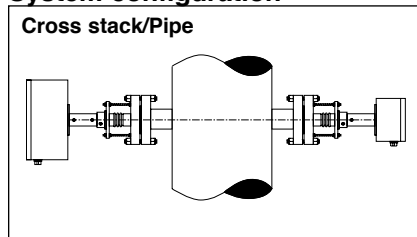

* Contact Yokogawa for further information

TruePeak TDLS



Optional Remote Interface Unit



Process Interface & Alignment



Operational Principle

Tunable Diode Laser Spectroscopy (or TDLS) measurements are based on absorption spectroscopy. The TruePeak Analyzer is a TDLS system and operates by measuring the amount of laser light that is absorbed (lost) as it travels through the gas being measured. In the simplest form a TDLS analyzer consists of a laser that produces infrared light, optical lenses to focus the laser light through the gas to be measured and then on to a detector, the detector, and electronics that control the laser and translate the detector signal into a signal representing the gas concentration.

Gas molecules absorb light at specific wavelengths, called absorption lines. This absorption follows Beers law.

TDL Analyzers are effectively infra red analyzers which obey the Beer-Lambert Law.

$$I = I_0 \cdot e^{-E \cdot G \cdot L}$$

where I is the radiation intensity after absorption
 I_0 is the initial radiation intensity
 E is the extinction coefficient
 G is the gas concentration
 and L is the path length of the measurement area

Using a Tunable Diode Laser as a light source for spectroscopy has the following benefits:

- **Sensitivity.** Application Dependant. Sub-PPM in some applications.
- **Selectivity.** The narrow line width of the laser is able to resolve single absorption lines. This provides more choices of a particular peak to use for measurement, usually allowing one isolated peak to be used.
- **Power.** Diode lasers have power ranging from 0.5mW to 35mW. Also, being highly coherent this allows measurement in optically thick environments (high particulate loading).
- **Monochromatic.** No dispersive element (filter, etc.) required. Light source itself is selective.
- **Tunable.** Wavelength can be swept across the entire absorption feature, this allows resonant (peak) and non resonant (baseline) measurement during every scan. By measuring the baseline and peak, power at the detector can fluctuate rapidly by large amounts without affecting the measurement. This is useful for high particulate applications.

Measurement

- During measurement the laser is held at a fixed temperature. This is the coarse wavelength adjustment.
- A current ramp is fed to the laser. This is the fine wavelength adjustment (figure 1).
- The current is ramped to scan across the wavelength region desired.
- The collimated light passes through the gas to be measured. The amount of light absorbed by the peak is proportional to the analyte concentration.
- The light is then focused on a detector (figure 2).
- This signal is used to quantify the light absorbed by the analyte (figure 3).

Figure 1. Current ramp to laser

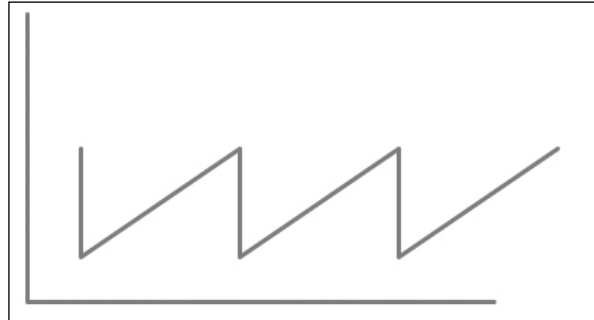


Figure 2. Signal at Detector


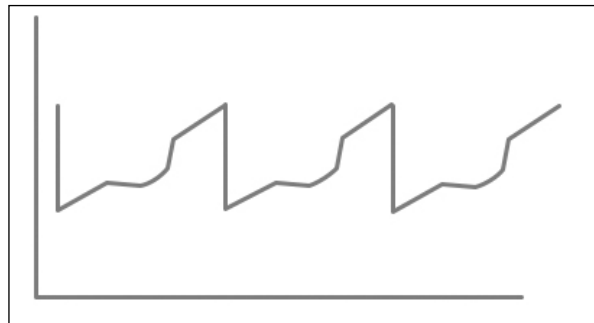


Figure 3. Processed Detector Signal

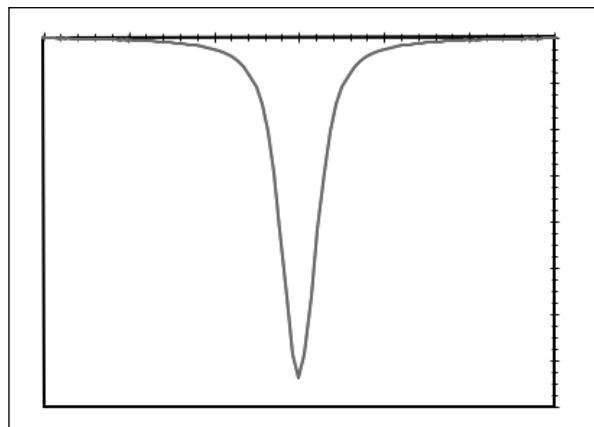

General Specifications

- A. Measurement range:** Dependent on application, optical path length, process pressure and temperature. Oxygen application typically 0-1% up to 0-100%. All other measured gases range from low ppm to high % levels.
- B. Output signal:** (3x) 4- 20 mA DC with maximum load of 900 Ohm
Three isolated outputs may be used for gas concentration, transmission, re-transmission of data inputs, dual range, or second gas measurement where applicable.
3.3 mA user configurable on warnings and faults, according to NAMUR NE43.
- C. Output Span:** Freely programmable within measuring range
- D. Contact outputs:** (3x) configurable relays for Status (Fault, Warning, In Validation, concentration level, etc.) Form C Single Pole Double Throw (SPDT) contact outputs with maximum 1A@24VDC.
- E. Valve control:** (3x) Form C SPDT contact outputs with C connected to 24VDC power supply to activate calibration solenoid valves for zero, span and dynamic spiking (validation) gas. Maximum load 1A (max 10W/ valve for zero and span gas and dynamic spiking).
- F. Current Input** (2x) 4-20 mA inputs for Temperature and Pressure Compensation for loop powered or mains powered (115/220 VAC) mA transmitters for pressure and temperature.
- G. Digital Communication:** Ethernet IEEE 802.3 10/100 mbps, RJ45
- H. Data storage:** USB1 and USB2 connection for data transfer using memory stick, data storage in CF card (result files, spectra capture, configuration data, etc.) Capture rate is configurable.
- I. Warm-up time:** 5 min for functioning, 60 min for full operation within specifications.
- J. Power Consumption:** 24 VDC, 4A
- K. Accessories:** 100-240 VAC, 50/60 Hz can be supplied to:
- Universal Remote Display (URD)
- Utility Panel(s)
- Optional Power Supply Unit
(These devices all supply 24 VDC to power the TDLS Analyzer)
- L. Optical Path Length:** Insitu standard, up to 30 meters allowed
Minimum, OPL .5 meter
Flow Cells, bypass installation, .5 meter recommended

Note: End User may supply 23.5 to 24.5 VDC direct to analyzer (typ.4A). Optional heat trace system may require additional and/or alternate power supplies.

Environmental Specifications

- A. Ambient Temperature:** Continuous operation - 10°C to 50°C, start up temperature 0°C to 50°C. Extended temperature installation options are available please contact Yokogawa.
- B. Humidity:** 0- 90 % RH non-condensing or 0- 100% with correct purge gas specifications.
- C. Area Classification:** CE Marked for zone 2 ATEX group II Cat. 3G with purge system EEx pz II T5 Class 1 Div. 2 Group BCD with integral purge kit
- D. Weather resistance:** IP65
- E. Cable entries:** ¾" FNPT threads (unused holes are plugged)
- F. Gas Connections:** Analyzer - ¼" welded Swagelok connection
Flow Cells - ⅜" and ¼" FNPT (other connections upon request)
- G. Enclosures:** Die Cast copper free Aluminum grade AL SI 12 with a powder coat exterior finish. The alloy is particularly resistant to salt atmosphere, Sulfur gases and galvanic corrosion.
Stainless Steel captive screws and optional keypad.
Laminated Safety Glass for optional display(s).
- H. Sample Gas Temperature:** Maximum 1500°C, Application Dependant
- I. Sample Gas Pressure:** Maximum (20 bar), Application Dependant
- J. Mounting Flanges:** 2" 150# ANSI RF or 3" 150# ANSI RF or adaptors for 4" 150# ANSI RF, DN50 PN16, 4" 150# ANSI RF, and DN80 PN16
- K. Mounting Angle:** Flange alignment tolerance within ±2 degrees
- L. Weights, approx:** Launch Unit 16kg x (35lbs), Detect Unit 5.5kg (12lbs)
2" 150# Alignment flange 4.5kg (10lbs), 3" 150# Alignment flange 9.5kg (15lbs)
- M. Particulate loading:** Maximum 95% transmission loss
- Note:** Each application may differ in maximum limitations depending upon the combination of gas temperature, gas pressure, optical path length and concentration of gas being measured.

Performance Specification

Precision:	Application Dependent
Linearity:	Typically $R^2 > 0.999$
Response time:	5 seconds, plus transport time for extractive systems when applicable
Drift:	Application Dependent

Installation Specifications

Hazardous Area: Zone 1: Contact Yokogawa
Zone 2: ATEX group II Cat. 3G with purge system EEx pz II T5 (-20< Ta <50C)

By Design: Class 1, Grp. B,C & D, Division 2 or Division 1 - (Purged)

Maximum Distance between Launch and Detect:
30 m (± 90 ft)
Maximum interconnecting cable 50m

Wetted Parts: Analyzer & standard Alignment Flange - 316 SS, BK-7 Glass, Teflon encapsulated Viton and Silicone RTV sealant.

Optional: Isolation Flanges and Flow Cells - 316 SS, Sapphire, Kalrez - Also available in Monel A400, Hastelloy C-276, Carpenter 20, Titanium Grade 2 and others on request.

Utilities:

Instrument Air may be used as a purge gas in principle for all of the below applications, but this will depend on the application type and the required precision of the measurement.

Oxygen Analyzer	N ₂
CO Analyzer	N ₂ or Instrument Air
CO ₂ Analyzer	N ₂ or other non-CO ₂ containing inert gas
H ₂ O ppm Analyzer	N ₂ with <20ppm levels H ₂ O for feed to optional Dryer Package
H ₂ O % Analyzer	N ₂

Flow Rate:

- 5-30 L/min for window purge
- 2 L/min for validation, calibration and optical purge

SIL Assessment:


The TDLS200 has a FMEDA assessment by *exida* and is classified as a Type B1 device in compliance with the following standards; IEC 61508 or EN 954-1. Functional Safety of Electrical/electronic/programmable electronic related systems; SIL 1 capability for single device.

* The TDLS200 is not SIL certified as standard; to be certified the unit must be specified and designed from the beginning to meet all SIL specifications.

Basic System Configuration


The TruePeak can be installed in a number of ways depending on process requirements. The most typical installation types are shown below, however other installation methods are possible, please contact Yokogawa with your application details.

Cross Stack/Pipe Configuration

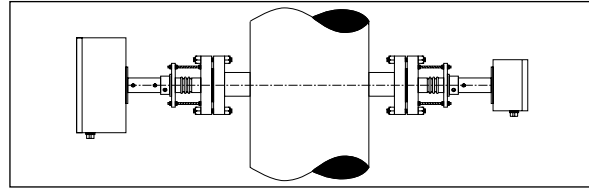


- Measures directly across process pipe or vessel
- Typically has nitrogen or other purge gas protecting process windows
- Span Validation via serial flow cell (see Operation Specifications).
- Full calibration requires removal from process
- May require pressure and temperature inputs (Application Dependent)
- Multiple methods to increase Optical Path Length (OPL) if needed
- 5 meter interconnection cable standard

Close Coupled Extractive / Bypass Configuration*

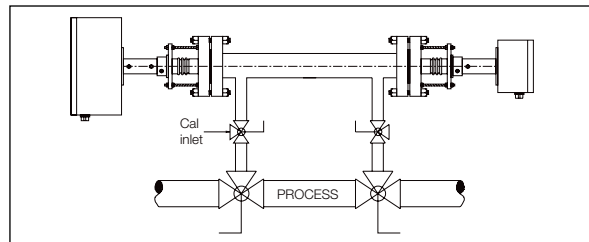

- Measures across a section of pipe where process flow is directed
- The measurement section can be isolated from process flow for full calibration/validation, zero and span
- Process pressure and temperature can be controlled or the analyzer may require pressure and temperature inputs (Application Dependent)
- Length of measurement section dependant on accuracy requirements and process conditions

Extractive Configuration*

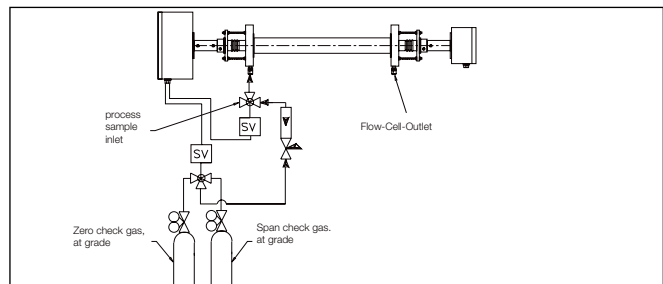

- Sample is fully extracted from process (and may be conditioned before measurement).
- Flow cells are available with ability to purge in front of windows (balanced flow cell) if required.
- Process pressure and temperature can be controlled or the analyzer may require pressure and temperature inputs (Application Dependent)
- Length of flow cell dependant on accuracy requirements and process conditions

* Contact Yokogawa for further details

Standard Accessories

Calibration Cell:

- Used for off-line calibrations and validations
- Stainless steel 316 with free standing frame
- Connects Launch and Detect with 72.6cm (28.6") OPL

Flow Cells:

- Used for extracted sample streams at any location
- 316SS low volume fixed alignment; 50°C, 5.5 bar (80psig) max
- Enhanced for 200°C, 20 Bar (290psig), Sapphire window, Kalrez o-rings and can be constructed from 316SS, Monel A400, Hastelloy C-276, Carpenter 20 and other materials on request to suit the process

Isolation Flanges:

- Used for additional protection for in-situ or by-pass installations
- 2" or 3" 150# or 300# ANSI RF, 4"150#, DN80 PN16 welded 5/8" or M16" bolt studs included sapphire 20 Bar (290 psig) or BK-7 5.5bar (80 psig) isolation window
- Kalrez window seal o-ring rated max 200°C
- 316SS, Monel A400, Hastelloy C-276, Carpenter 20, other on request

Note: Must use in conjunction with alignment flanges

Utility Panel:

- Used for convenient field installation of utilities, configurations for
- Single, dual or four analyzers
- Manual or automatic on-line validation (controlled by analyzer)
- Safe area (GP), Div 2 purged or non-purged, ATEX CAT 2G components
- Purge flowmeters with integral needle valve, glass tube variable area
- Swagelok double ferrule stainless steel tube fittings and tubing standard
- Panel mounted or fiberglass (NEMA 4X/IP65), with viewing window
- 5A 24VDC power supply, output to analyzer – requires VAC input power

Note: Custom configuration available to suit customer requirements

Integration:

- Used for convenient analyzer & extractive system/flow cell integration
- Free standing frame, galvanized steel with 304SS roof
- Fiberglass enclosure with powder coated steel frame
- Heat tracing and insulation for flow cells and sample handling
- 316SS and/or Monel A400 wetted parts – other on request
- Sample handling and conditioning systems to suit applications
- Stream switching manual or automatic (controlled by analyzer)

Note: Custom configuration available to suit customer requirements

Display and Software Functions

TruePeak Software has multiple levels, the default (or start page) is the Main Menu:

Main Menu Displays:

- Concentration & Units (% or ppm)
- Transmission %
- Status (warm-up, OK, Warning, Fault, etc.)
- Temperature (Fixed, Active Ambient or Active)
- Pressure (Fixed or Active)

Main Menu:

Basic Menu

- Configure, 3 functions
- View Spectra, 2 functions
- Data, 3 sub-menus
- Trends

Advanced Menu

(User Password)

- Configure, 9 sub-menus
- Calibrate & Validate, 3 sub-menus
- Data, 4 sub-menus
- Trends,

Active Alarms

- List of active alarms

Shut Down Analyzer

- Instructions to close TruePeak local or VAC

Calibration Functions:

Off-line Calibrations:

- Zero calibration
- Zero off-set
- Span calibration
- Transmission
- Dark current
- peak search

Off-line Validations:

- Check gas #1
- Check gas #2
- Check gas #3

On-Line Validations:

- Manual
- Automatic

Setup Functions: Configuration:

- Process Path Length
- Pressure
- Temperature
- Units
- System I/O
- System
- Valve Control
- Laser Spectra & Control

Diagnostics:

Warnings include:

- Detector signal low
- Transmission low
- Spectrum noise high
- Process pressure out of range
- Process temperature out of range
- Concentration out of range
- Board temperature out of range
- Validation failure

Faults include:

- Laser temperature out of range
- Detector signal high
- Detector signal lost
- Peak center out of range

Output Settings:

Analog Output:


- Channel 1
- Channel 2
- Channel 3
- Warning Mode
- Fault Mode
- Field Loop Check
- AO CH calibration

In-Situ Calibration / Validation

Validation (shown below) can be performed on-line. A serial validation flow cell is fitted in the analyzer between the laser source and the process window. During normal operation the validation cell is filled with nitrogen (analyzer measuring process gas only). After initiating a validation, this cell is filled with a known standard of the gas being measured, the analyzer will then measure the process gas + the validation gas (dynamic spike). The validation cell flow is then returned to nitrogen (analyzer measuring process gas only).

The analyzer will calculate the validation response by averaging the process readings before and after the dynamic spike and subtracting that value from the reading during the dynamic spike. This provides a relative proof of span and a positive indication of operation.


Calibration must be performed manually. The analyzer is removed from the process connections and installed on a calibration cell. Zero and span gas can then be applied to the analyzer with calibration performed through the user menu.

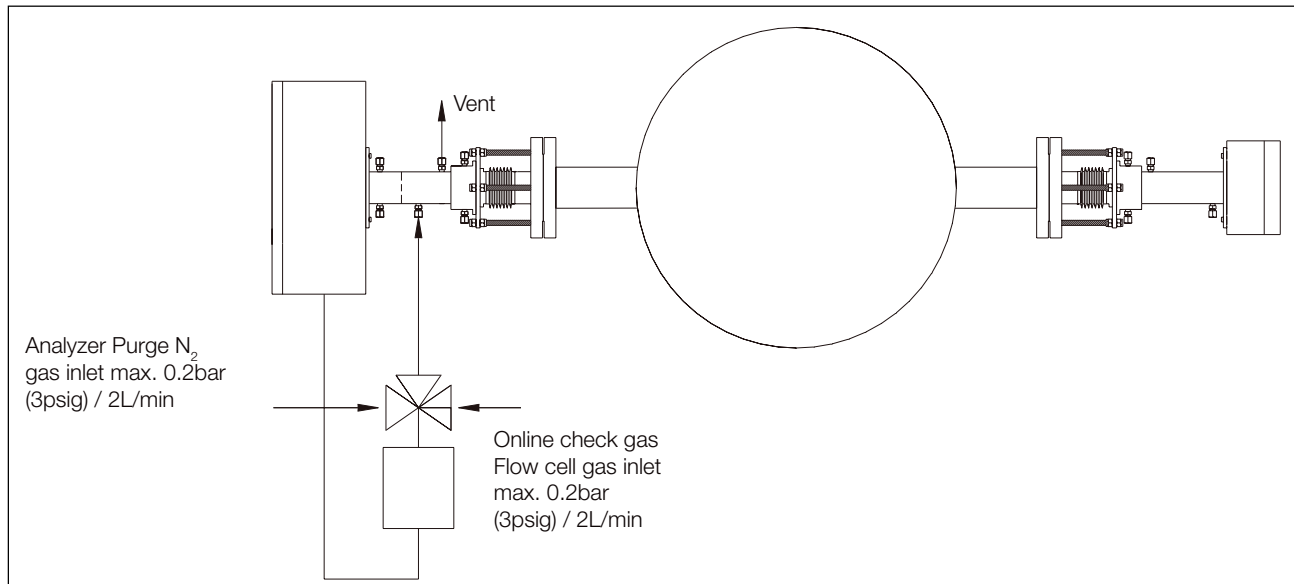


Extractive or Close Coupled Calibration / Validation:

Validation can be performed manually or automatically with the serial validation cell (span check only described above), or by isolating the analyzer from the process and flowing zero and span gas through the optical path (flow cell or bypass piping).

Calibration must be performed manually. The analyzer is isolated from the process gas, zero and span gas can then be applied to the analyzer with calibration performed through the user menu. For applications where the measured gas is typically not present (0 level concentration), Yokogawa recommends an auto-validation sequence once per month.

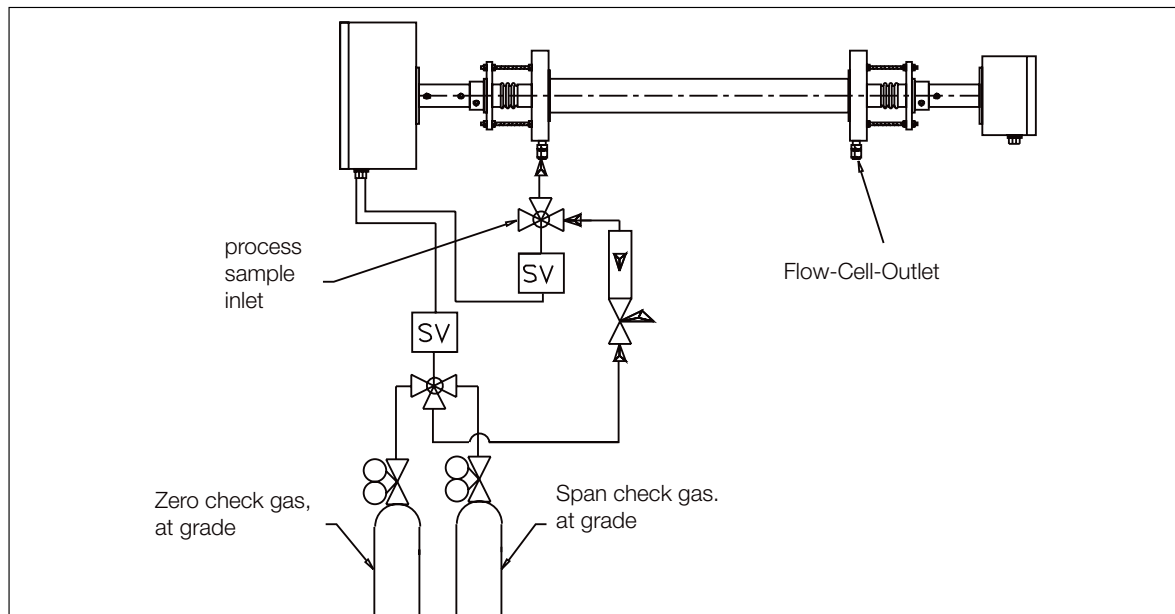


Dimensions

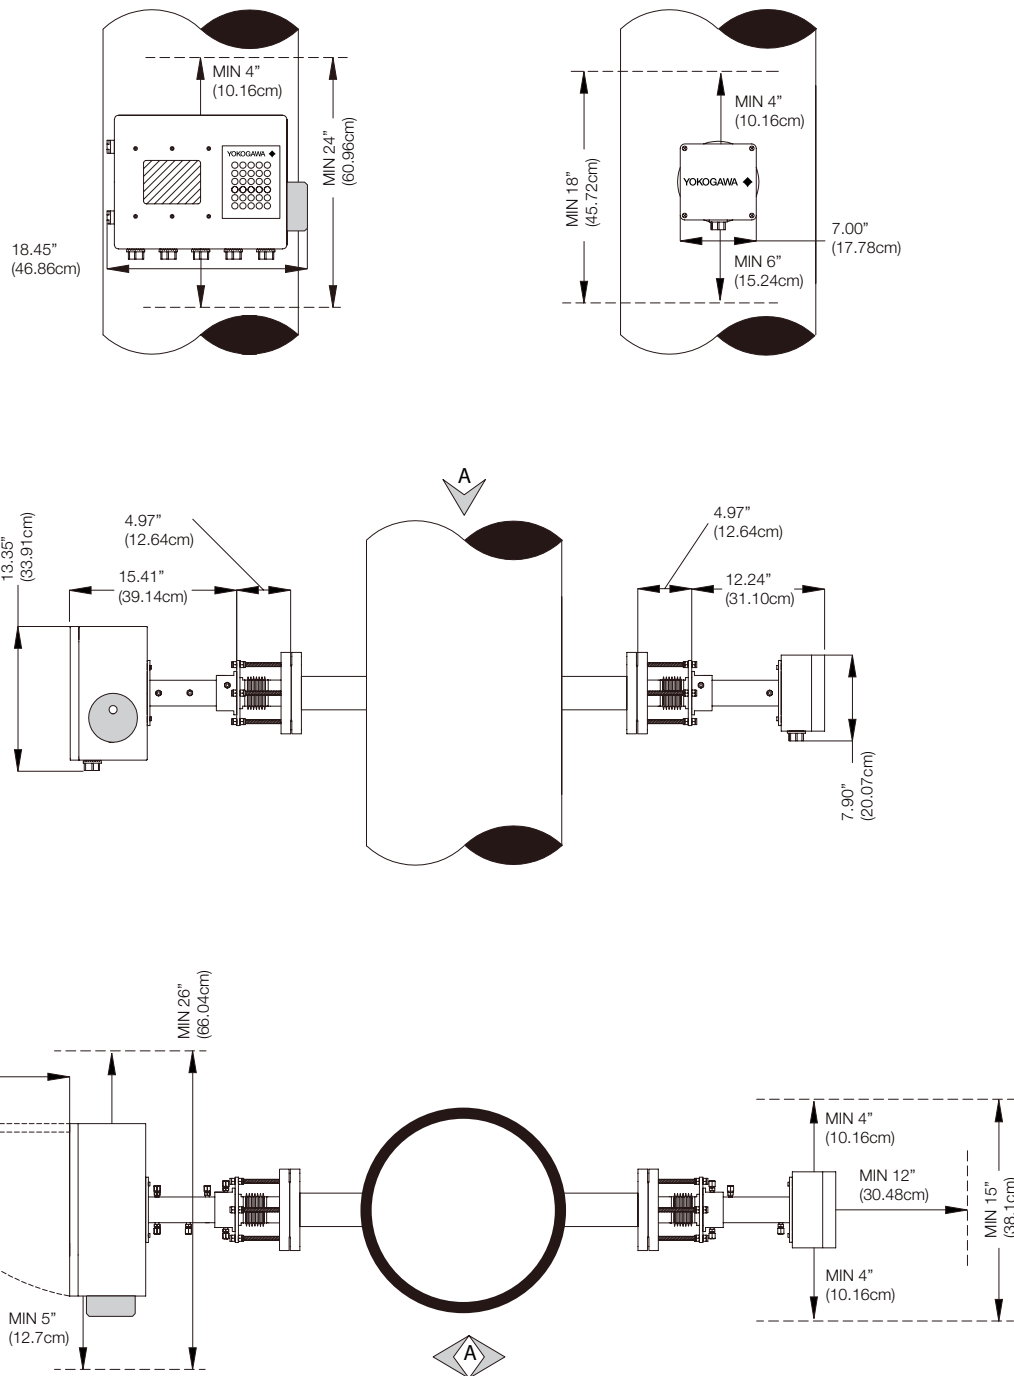

The analyzer requires purge gas N_2 /air/other the flow of which needs to be controlled. Utility panels may be provided in various forms for one or two units to control purge gas and validation gases as standard and additional purge gas for hazardous area application when required. The Utility panel can automatically control via the analyzer validation gases which will indicate whether the analyzer is within calibration.

The Analyzer in normal usage is a non contact device. Purge gases are used to ensure sample does not contact the analyzer, and these gases are often a gas which does not contain the gas to be measured. Nitrogen, for example, is often used as a purge gas in Oxygen measurement. However, depending on the application, it may be possible to use air as a purge gas (even for oxygen measurements) and purge gases are not invariably required.

Wiring of Launch for the CU version

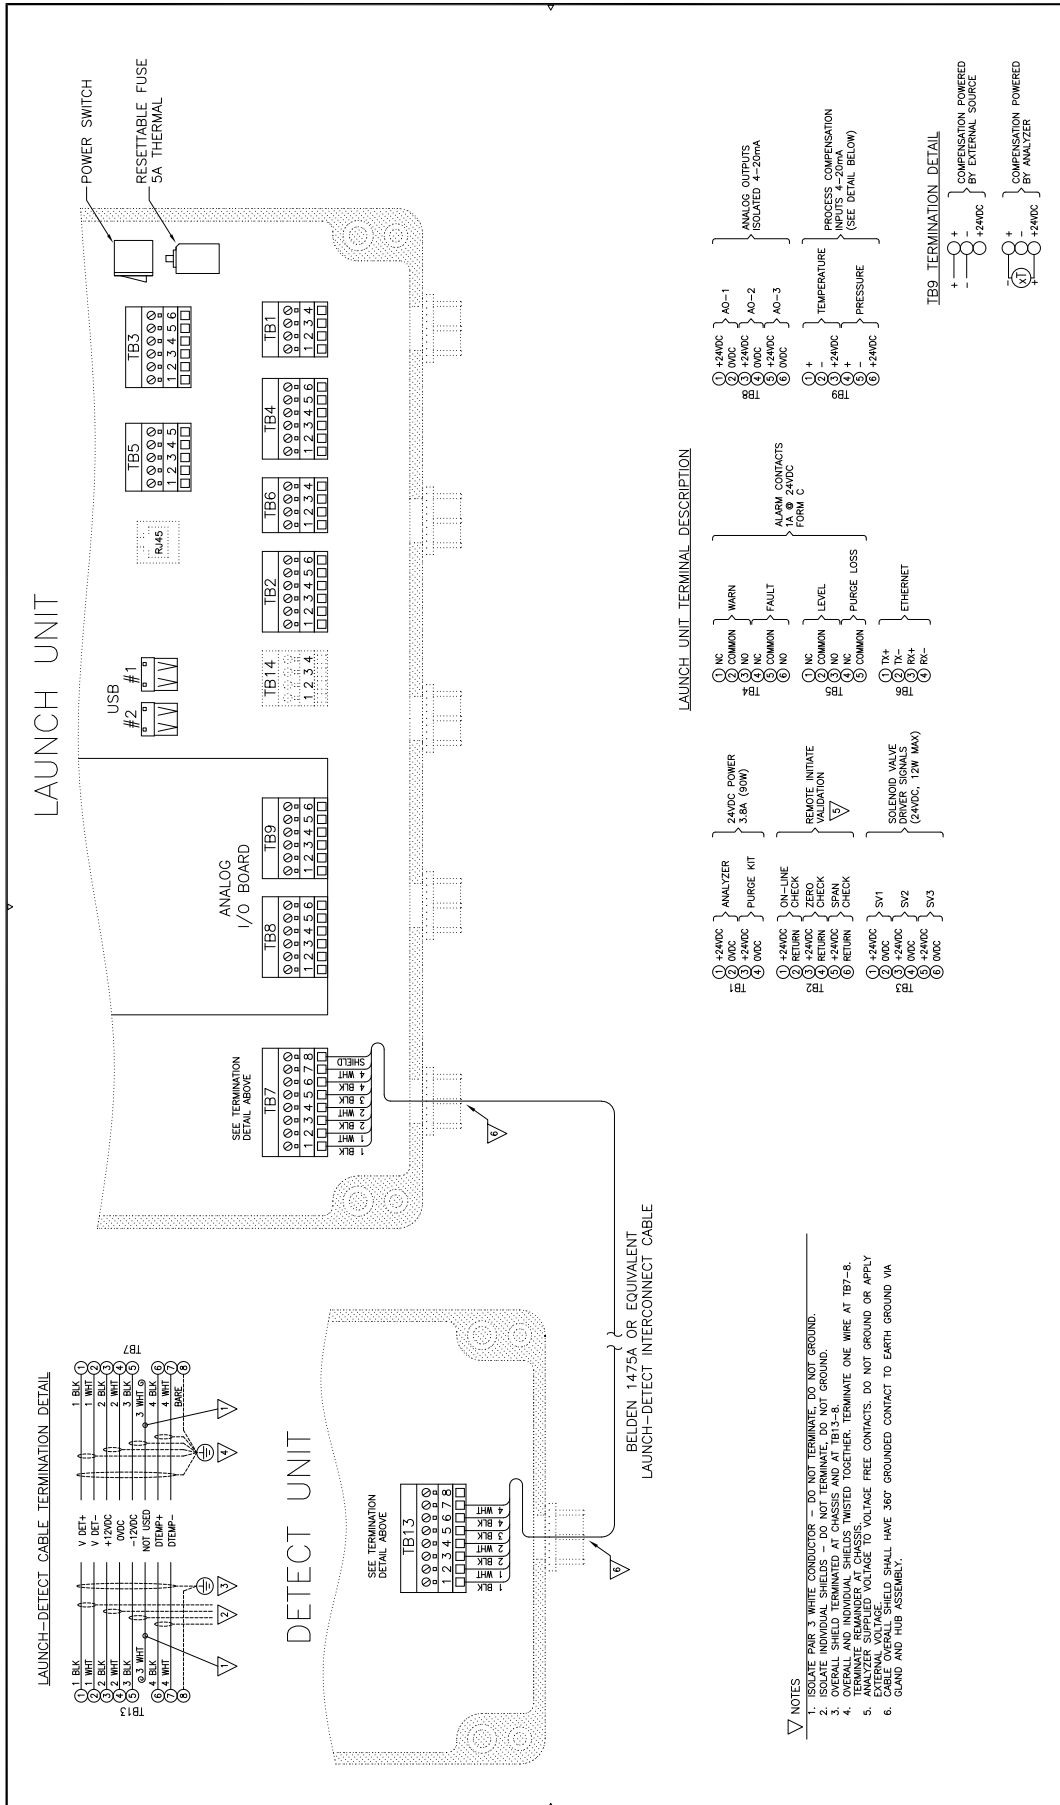

Model and Suffix Codes

Model	Suffix Code	Option Code	Description
TDLS200	-----	-----	Tunable Diode Laser
Type	-N -G -D -S -J	----- ----- ----- ----- -----	General Purpose (None CE) General Purpose (CE) Class I Div 2 BCD Purged ATEX CAT 3/ zone 2 Purged TIIS Hazardous Area
Gas Parameter	-X1 -X2 -X3 -C1 -C2 -C3 -C4 -A1 -A2 -S1 -D1 -D5 -H1 -H2 -H3 -H4 -K1	----- ----- ----- ----- ----- ----- ----- ----- ----- ----- ----- ----- ----- ----- ----- ----- -----	Oxygen (O ₂) < 600°C, 0-25% Oxygen (O ₂) < 1500°C, 0-25% Oxygen (O ₂) <1500°C, 0-25%/ Temp Carbon Monoxide (CO) % <500°C Carbon Monoxide ppm (CO) <500°C Carbon Monoxide ppm (CO) <1500°C Carbon Monoxide (CO) ppm <1500°C + CH ₄ 0-5% Ammonia (NH ₃) up to 0-5,000ppm Ammonia (NH ₃) 0-5,000ppm & 0-50% H ₂ O Hydrogen Sulfide (H ₂ S) up to 0-50% Carbon dioxide (CO ₂) High Range 0-1; 0-5% Carbon dioxide (CO ₂) Extend. Range 0=5; 0-50% Water moisture (H ₂ O) min 0-30ppm Cl ₂ background Water moisture (H ₂ O) ppm non-hydrocarbon background Water moisture (H ₂ O) ppm Hydrocarbon background High moisture (H ₂ O) level min 0-5% Special Applications
Laser Interface	-N -1 -2	----- ----- -----	None- Blind Controller Integral Mini Display Integral Color LCD Backlit
Interface	-N -A -B -2 -3 -4 -5 -8	----- ----- ----- ----- ----- ----- ----- -----	No Process Interface Included Large Aperture Optics with 3" 150# alignment bellows Large Aperture Optics, with 4" 150# alignment bellows 2" 150# Alignment Bellows 3" 150# Alignment Bellows 4" 150# Alignment Bellows DN50 Alignment Bellows DN80 Alignment Bellows
Options		/U ----- /P ----- /D -----	Ext.USB Port IP66 (NOT ATEX) Pressure Comp Curve Diverging Beam No Large Aperture Optics

User Interface

1. Local Analyzer Interface

Basic Unit (Blind)



No local interface built-in. USB port is provided for data transfer. To configure, start-up and service the analyzer, User must use: a PC/ Laptop with Ethernet (VNC) connection and (VAC) Virtual Analyzer Controller Software Package (included), or a (RIU) Remote Interface Unit.

Mini-Display




A 4 line 20 character (4x20) vacuum florescent display (VFD) built in to the door of the launch unit. It will display measurement concentration, Transmission, scrolling Status (including alarm types) and scrolling system information (including process parameters). User must use: a PC/Laptop with Ethernet (VNC) connection and (VAC) Virtual Analyzer Controller Software Package (included), or a (RIU) Remote Interface Unit. A USB port is provided for data transfer.

Screen & Keypad



A 30 key stainless steel keypad and 6.5" graphical LCD panel built in to the door of the launch unit. This provides full local interface. It eliminates the need for a PC/laptop or (RIU) Remote Interface Units. USB port is provided for data transfer.

2. Remote Interface Unit (RIU)

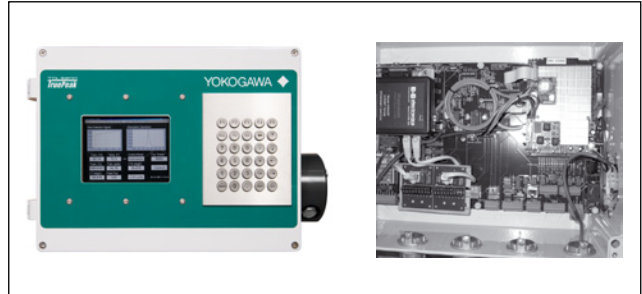

Use with any type of analyzer, a separate wall mount enclosure with screen and keypad. Connects via Ethernet (VNC), up to 3 (standard) 8 (on request) analyzers. Requires 24 VDC input power

- Wall mount enclosure, IP65 (NEMA 4) powder coated aluminum
- Approx 460x330x180mm (18"w x 13"h x 7"d) weight 11.5kg (25lbs)
- Purged for ATEX CAT 2G or CAT 3G, CE, NEC Cl.1, BCD, Division 1 or 2
- Requires 23.5 - 24.5VDC Input power
- Integral keypad and 6.5" display
- Accepts 8 analyzer Ethernet connections – Standard
Accepts more analyzer Ethernet connections – On request
- Connection to Analyzer Unit via 8 pair shielded twisted pair cable.

TruePeak Virtual Analyzer Controller (VAC) software included, running Window XP embedded OS.

Model And Suffix Code YR200 Remote Interface Unit for TDLS


Model	Suffix	Description
YR200	-----	Remote Interface Unit
Type	-G1 ----- -D2 ----- -A1 -----	General Purpose Hazardous Area Div 2 Hazardous Area ATEX
-----	-N ---	Always N

Utility Panel

A Utility Panel provides a central location for:

- Inst Air / N₂ supply for purges
- Validation control
- Purge control
- 110 VAC line power in and 24VDC out to each analyzer
- Analog signals
- Digital signals
- Analyzer interface

Yokogawa supplies a single interconnect cable that connects the Utility Panel to the Launch unit for power and signal requirements. Utility Panels for 1 to 4 analyzers are available.

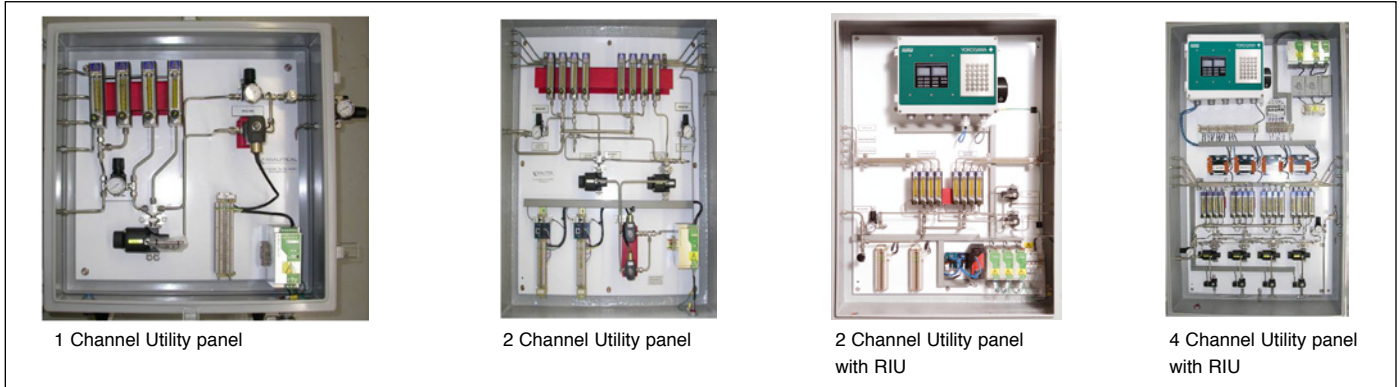

Model and Suffix Codes

TDLS200 Utility Panel (YP200)

Model	Suffix Code		Description
YP200	-----		Utility Panel for TDLS
Number of Channels	-1	-----	Single Utility Panel
	-2	-----	Dual Utility Panel
	-3	-----	Triple Utility Panel
	-4	-----	Quad Utility Panel
Materials of Construction	-E1	-----	Fiberglass
	-E2	-----	Stainless Steel 316
	-E3	-----	Stainless Steel 304
Materials of Back Plate Style	-A	-----	Painted Steel
	-B	-----	Stainless Steel 316
Type	-GP	-----	General Purpose
	-H2	-----	Hazardous Area (Div 2)
	-AH	-----	ATEX Hazardous Area
Interface	-N	-----	Without Remote Interface Unit
	-R	-----	With Remote Interface Unit
Validation Type	-MA	-----	Manual Validation
	-AU	-----	Automatic Validation
-----	-N	----	Always N

Cables

The WT200 cables supplied by Yokogawa Corporation of America are compatible with all Yokogawa TDLS analyzers. The purpose of these cables is to transmit the signal from the sensor/detector to the analyzer.

The cable is either a 4 pair or 8 pair bare copper stranded conductor material covered with thermoplastic PVC. The wires are also covered with thermoplastic PVC individually and colored.

Technical Specifications

Conductor:	WT200-LD: 4 Pair Shielded 18 AWG bare copper material WT200-UT: 8 Pair Shielded 18 AWG bare copper material WT200-EN: 4 Pair Shielded 24 AWG bare copper material	Shield:	WT200-LD: Both individual wires and overall WT200-UT: Both individual wires and overall WT200-EN: No outer shield
Conductor Type:	Stranded Conductor	Jacket:	PVC- Polyvinyl Chloride
Insulation Material:	WT200-LD: PVC- Polyvinyl Chloride WT200-UT: PVC- Polyvinyl Chloride WT200-EN: PO- Polyolefin	Voltage:	300 VAC Power Limited
		Temperature Rating:	WT200-LD: Up to 105°C WT200-UT: Up to 105°C WT200-EN: -20 to 75°C (installation range) 420 to 75°C (operating range)

Model and Suffix Codes

WT200 Cables for the TDLS

Model	Suffix Code	Description
WT200	-----	TDLS Cables
Type	-LD ----- -UT ----- -EN -----	4-Pair Tray Rated 8-Pair Tray Rated Ethernet Cable
Length	-005 ----- -010 ----- -015 ----- -020 ----- -025 ----- -030 ----- -035 ----- -040 ----- -045 ----- -050 ----- -055 ----- -060 ----- -065 ----- -070 ----- -075 ----- -080 ----- -085 ----- -090 ----- -095 ----- -100 -----	5 Meters 10 Meters 15 Meters 20 Meters 25 Meters 30 Meters 35 Meters 40 Meters 45 Meters 50 Meters 55 Meters 60 Meters 65 Meters 70 Meters 75 Meters 80 Meters 85 Meters 90 Meters 95 Meters 100 Meters
Ends	-CE ----- -US ----- -NA -----	CE End Preparations US End Preparations No End Preparations
-----	-N --	Always -N



Application Inquiry Form

1. General Information

Company: _____	Requested Delivery Date: _____
Address: _____	Contact Person: _____
Email: _____	
Telephone: _____	Fax: _____
Plant Location _____	Brief Description of application: _____

2. Installation Details (check one - see drawings):

Cross Stack/Pipe. For measurement across the process.
 Path length _____ Process Connection _____

Bypass Leg. Measurement across bypass leg located at process measurement point.
 Path length _____ Process Connection _____

___ x ___ Extractive. Sample is extracted and transported (by others) to analyzer.

3. Analyzer Options:

User Interface: Blind analyzer With mini display With color LCD & Keypad RIU for Multiple Analyzers
 M1276TP M1276XA M1276XB varies depending on area classification

Cable length from Analyzer Unit to User Interface (specify units): _____

Area Classification: _____

Ambient Temperature (Min-Max.) Specify units _____

4. Validation

Validation Method Not supplied Dynamic spiking (incl. valves and controls) Auto-calibration check (extractive system)

5. Process Wetted Materials

Must Use _____ Must Not Use _____

6. Electrical Power Supply:

Optional: Universal AC Power Supply Unit, Accepts 100-240 VAC 50/60Hz input and outputs 24VDC, one per analyzer or RIU

7. Stream Composition (1 sheet per stream analyzed)

Component	Concentrations			Units	Measured	Range If Measured	Precision If Measured			Alarm Level
	Name	Min.	Typ.				Max.	ppm(v) vol%	Yes/No	
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		
								+/-		

8. Physical Properties

	Units	Min.	Typ.	Max
Temperature				
Pressure				
Dew Point				
Water Vapor				
Flow				
Velocity				
Particulate Concentration				

9. General Application & Installation Notes/Comments:

YOKOGAWA HEADQUARTERS

9-32, Nakacho 2-chome,
Musashinoshi
Tokyo 180
Japan
Tel. (81)-422-52-5535
Fax (81)-422-55-1202
E-mail: webinfo@mls.yokogawa.co.jp
www.yokogawa.com/jp

YOKOGAWA EUROPE B.V.

Euroweg 2
3825 HD Amersfoort
The Netherlands
Tel. +31 (0)88-4641000
Fax +31 (0)88-4641111
E-mail: info@nl.yokogawa.com
www.yokogawa.com/eu

YOKOGAWA CORPORATION OF AMERICA

2 Dart Road
Newnan GA 30265
United States
Tel. (1)-770-253-7000
Fax (1)-770-251-2088
E-mail: info@yca.com
www.yokogawa.com/us

YOKOGAWA ELECTRIC ASIA Pte. Ltd.

5 Bedok South Road
Singapore 469270
Singapore
Tel. (65)-241-9933
Fax (65)-241-2606
E-mail: webinfo@yas.com.sg
www.yokogawa.com.sg

Yokogawa has an extensive sales and distribution network. Please refer to the website (www.yokogawa.com/an/index.htm) to contact your nearest representative.

**YOKOGAWA** ◆

GS 11Y01B01-01E-A
Subject to change without notice
Copyright © 2008

Printed in The USA